


ITEM NO.	DESCRIPTION	QTY.
1	Body	1
2	Rim for 12x10.5-12	4
3	12x10.5-12	4

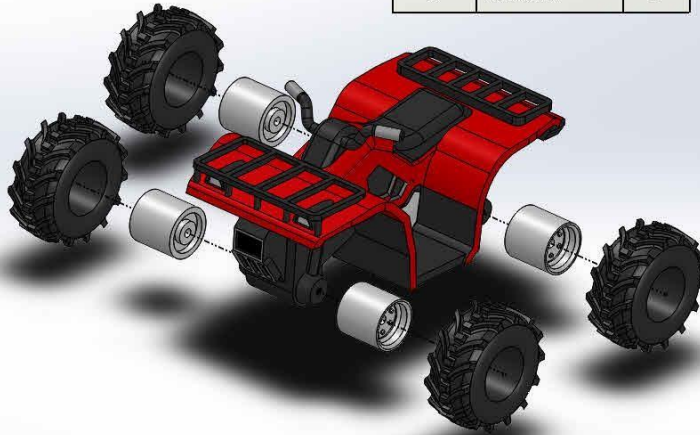

1. Inspect all parts and sand or file any burrs or imperfections. Be very careful of the handlebars, they are very thin and will break fairly easy.
2. Prepare parts for painting by washing in water with a drop of dishwashing liquid. This will remove any oil residue and allow paint to adhere properly.
3. Drill out the holes for axles/pins with a .025 drill bit
4. Mount tires on rims. May need to sand for proper fit.
5. Slide pin through rim, cut off excess, apply glue to end of pin and insert into drilled whole.